


SWS-51K-200/250 Supplemental Water System Installation Instructions

Parts Included With the SWS-51K-200/250

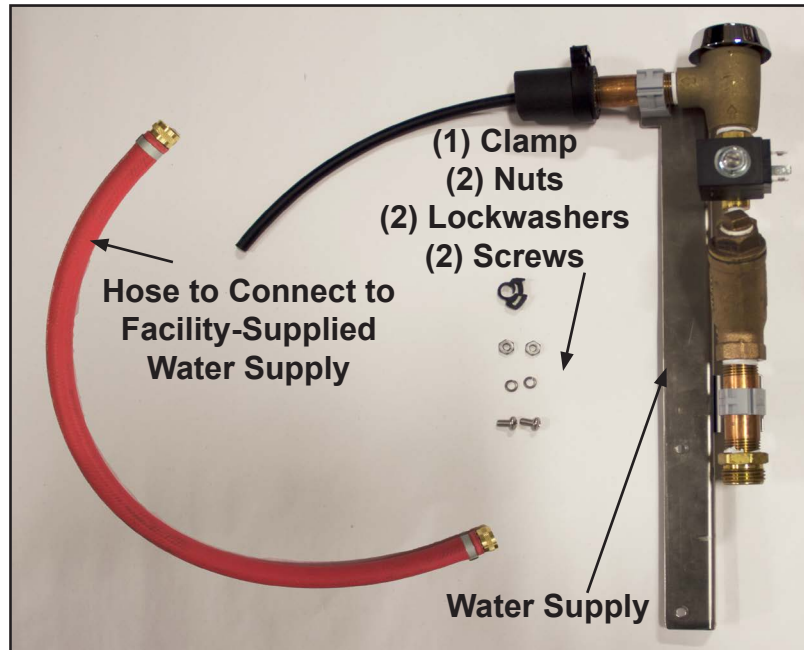

Tools Needed to Assemble SWS-51K-200/250



* The Solenoid Plug comes Pre-wired to the Big Dipper Electrical Module

BIG DIPPER[®]
A THERMACO[®] Technology

Copyright ©2018 Big Dipper[®] Thermaco, Inc. • P.O.Box 2548 • Asheboro, NC 27204 • Toll Free: (800) 565-3569
V: (336) 629-4651 • F: (336) 626-5739 • E-mail: info@thermaco.com • Online: www.big-dipper.com

SWS-51K-200/250 Supplemental Water System Installation Instructions

*** Install after Big Dipper is in place. Unplug Big Dipper Unit before installation.**

- 1) Screw in 2 screws to install water supply on outlet bracket (Figure 1)
- 2) Attach the black hose (connected to water supply) to lid w/ clamp (Figure 2)
- 3) Attach solenoid plug with screw (Figure 3)
- 4) Screw on red water supply hose (Figure 4)



Figure 1



Figure 2



Figure 3



Figure 4

BIG DIPPER[®]
A THERMACO[®] Technology

Copyright ©2018 Big Dipper[®] Thermaco, Inc. • P.O.Box 2548 • Asheboro, NC 27204 • Toll Free: (800) 565-3569
V: (336) 629-4651 • F: (336) 626-5739 • E-mail: info@thermaco.com • Online: www.big-dipper.com

SWS-51K-200/250 Supplemental Water System Installation Instructions

***A SWS-51K-200/250 installed
on a Big Dipper Advanced W-200-IS***



BIG DIPPER[®]
A THERMACO[®] Technology

Copyright ©2018 Big Dipper[®] Thermaco, Inc. • P.O.Box 2548 • Asheboro, NC 27204 • Toll Free: (800) 565-3569
V: (336) 629-4651 • F: (336) 626-5739 • E-mail: info@thermaco.com • Online: www.big-dipper.com